General wiring diagram
Sequent 32 LPG

Date:	Nov 28th 2014
Diagram N°:	1
Replaces diagram:	//.//.//.
Draftsman:	M.P.
Signature:	

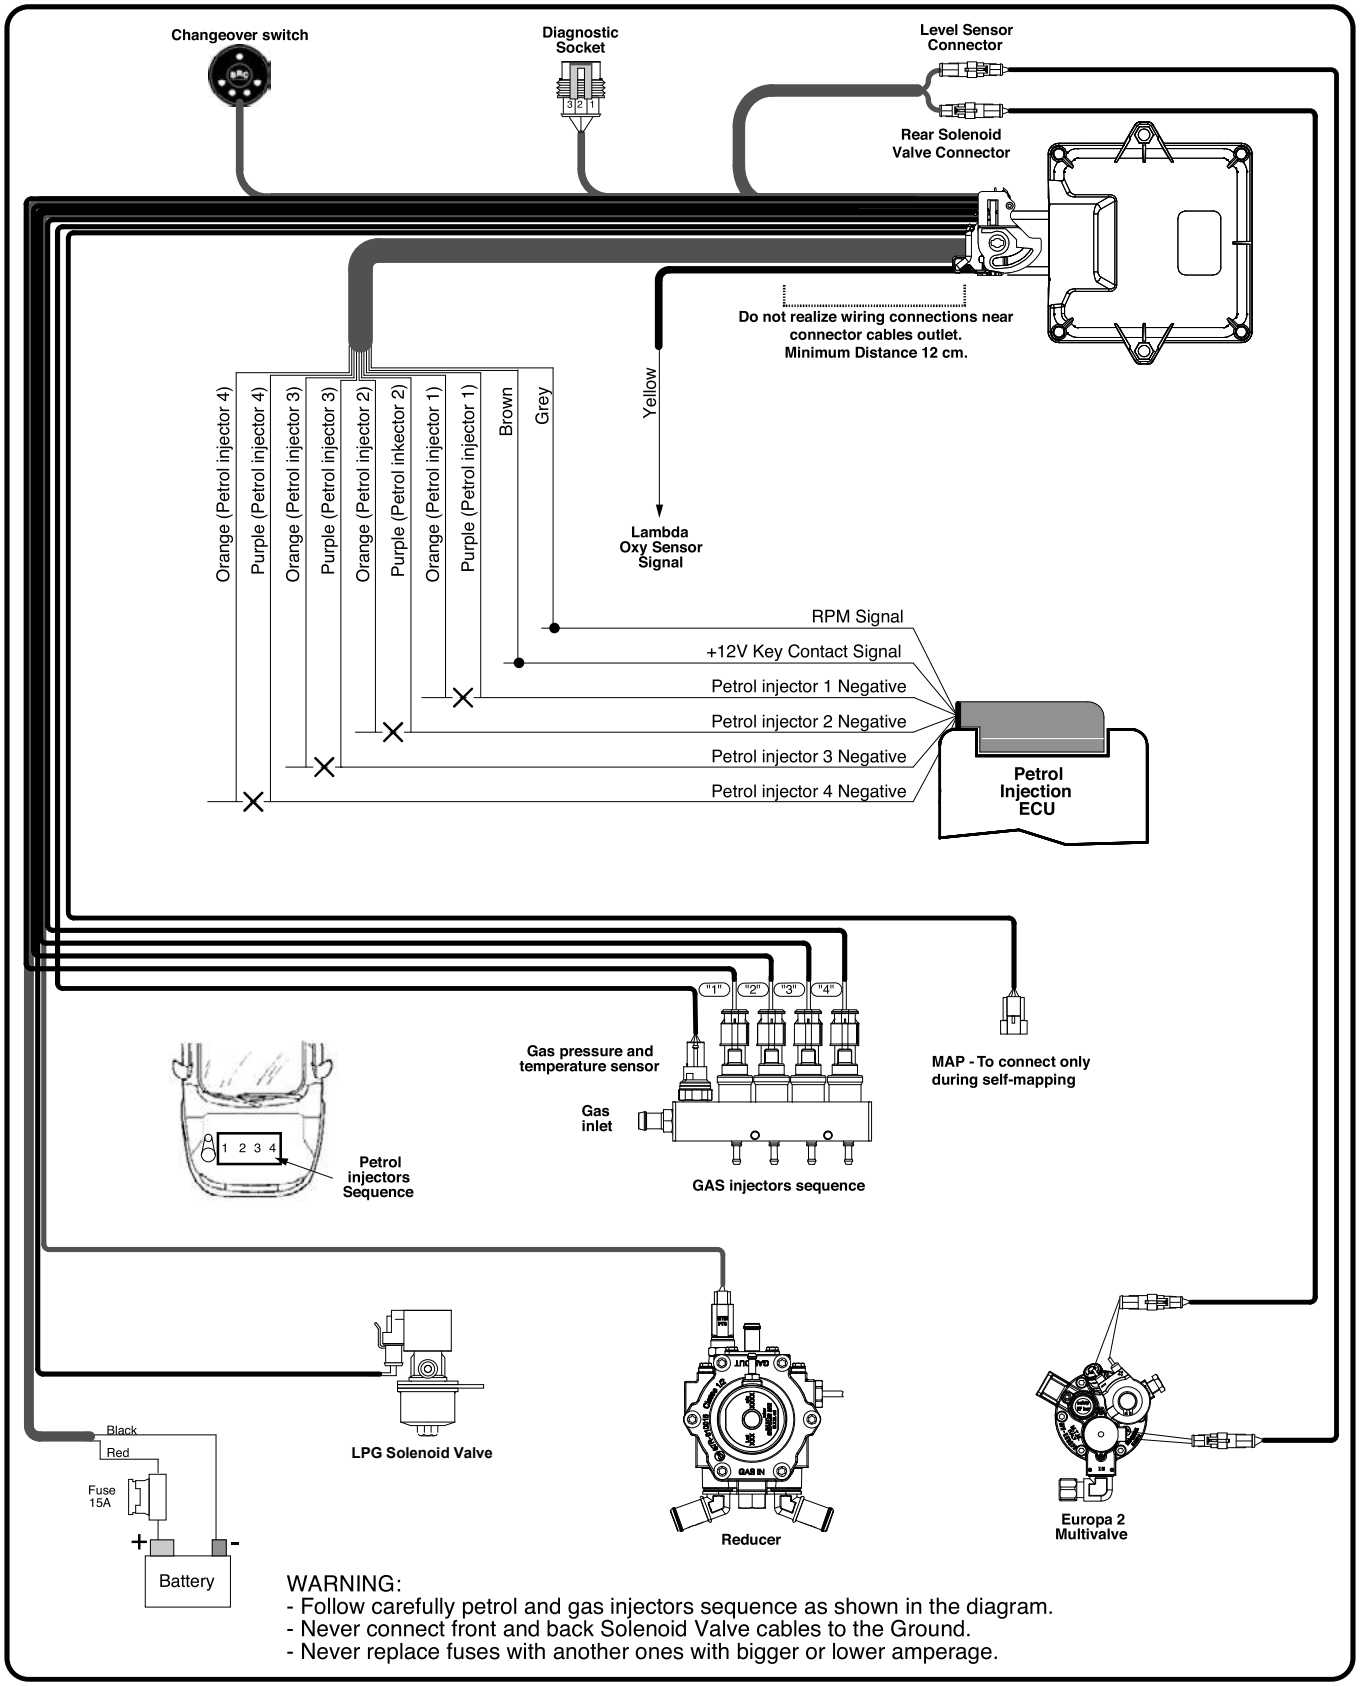

WARNING:
- Follow carefully petrol and gas injectors sequence as shown in the diagram.
- Never connect front and back Solenoid Valve cables to the Ground.
- Never replace fuses with another ones with bigger or lower amperage.

CAUTION:
Be careful with cars for which the manufacturer prohibits or advises against disconnecting the battery, not to alter the antitheft devices or automatic adaptivity - Never use welders connected to the battery of the same car - Connect with suitably insulated soft solderings - Position the BRC electrical devices in a well ventilated area, protected from water seepages and heat sources - We recommend to insulate the BRC electronic control unit wires which are not connected - BRC reserves the right to modify this diagram without notice - We also recommend you to be sure to have the last revision of the diagram drawn up by BRC.